

SAFETY INSTRUCTION FOR THE USE OF LUMINAIRE MODEL 1450 – MINIRAMA A 2

MAXIMUM POWER 2500W (2x1250W) – RATED VOLTAGE 240V.
LAMPHOLDER R7s TYPE.

THIS LUMINAIRE HAS BEEN DESIGNED FOR PROFESSIONAL USE AND MUST BE OPERATED BY QUALIFIED PERSONNEL ONLY. NOT FOR RESIDENTIAL USE.

1. Before connecting the luminaire to the electrical mains, ensure that: the luminaire is earthed; the mains supply voltage corresponds to that one of the lamp fitted.
2. Before fitting or replacing the lamp ensure that the luminaire is switched off or disconnected from the power supply socket.
3. To fit or replace the lamp, the safety shields fixed by screws on the front part of the luminaire must be removed
4. Let the lamp cool down, before removing it from the luminaire.
5. Check that the lamp fitted is amongst the recommended types, and has a nominal power no higher than the maximum power indicated on the luminaire.
6. Handle the lamp according to the instructions given by the lamp's manufacturer.
7. Once the lamp is fitted, ensure that the safety shields are accurately re-mounted.
8. Change the lamp if damaged or thermally deformed.
9. The luminaire must not be switched on if the safety shields supplied mounted on the luminaire are not in place.
10. Change the safety shields if they have become visibly damaged to such an extent that their effectiveness is impaired, for example by cracks or deep scratches.
11. This luminaire is not suitable for use on inflammable surfaces. Maintain a minimum distance from them of 0,70 metres.
12. Maintain minimum distance to lighted objects of 0,70 metres.
13. The maximum operating inclinations are 90° downward (ground) and 90° upward (ceiling).
14. The luminaire can be used hanging as well as standing.
15. If hanging, the luminaire must be secured to the suspension point by a secondary steel safety chain or wire to prevent it from falling.
16. To prevent the luminaire from overheating never reduce its ventilation.
17. Inspect periodically the main components (cables, lampholder, safety shields etc.), and provide for the necessary replacements at the right time, only with the original spare parts and referring service to qualified personnel.

IANIRO ALDO S.r.l.